

## INSTRUCTION SHEET



### SOUND CONTROL KIT FOR 14+ H-D FLHT

#### INCLUDED COMPONENTS:

- Pre-cut Dynamat Xtreme (11)
- Pre-cut Dynaliner (3)

#### HELPFUL FOR INSTALLATION:

- Gloves
- Utility Knife

#### QUESTIONS?



**EMAIL:**  
info@getklocked.com  
**CALL:** (605) 996.3700



1



2



3



4




5

1. Remove outer fairing and rest on a soft cloth.
2. Clean any dust and debris from inside the outer fairing.
3. Test fit Dynamat Xtreme to check for alignment and position with paper backing still attached. **(1 and 2)**
4. Remove paper backing to expose butyl layer.
5. Apply Dynamat Xtreme to designated area using light pressure at first, to aide in adjustment. **(3)**
6. Smooth from center outward to prevent air pockets. Use a rag or gloves to flatten the Dynamat Xtreme and work into contours of the fairing. If an air pocket develops, simply puncture with a knife or pin and roll smooth.
7. Test fit Dynaliner to check alignment with paper backing still attached. **(4)**
8. Peel the release liner, and apply **Dynaliner (Components D2, E2 and F2)** directly to the **Dynamat Xtreme**, pressing it firmly into place. **(5)**

**CAUTION:** Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.

# COMPONENT SHEET

## DYNAMAT

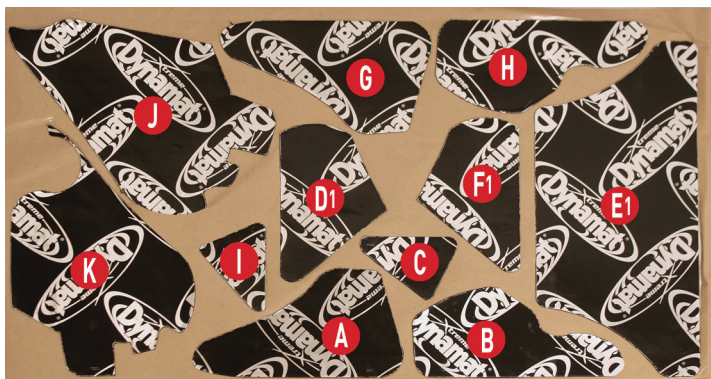


## DYNALINER



Dynamat components designated with a 1 must be applied before Dynaliner components designated with a 2.

## OUTER FAIRING

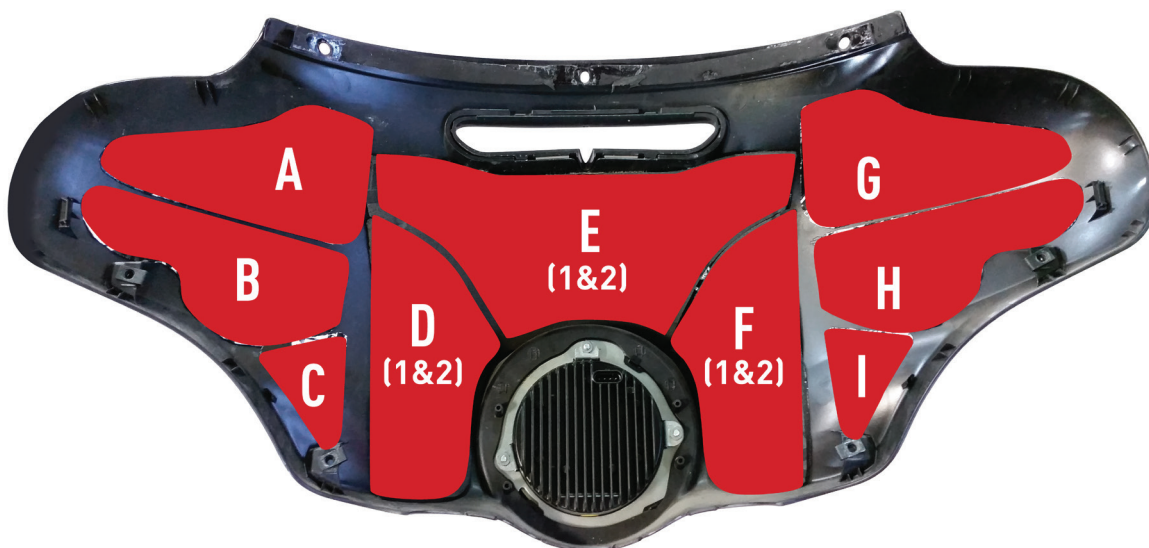

## INNER FAIRING

