




## HARLEY-DAVIDSON | FITS MOST '84+ MODELS WITH 3.5" CENTER TO CENTER RISER

### 1. ADAPT

Clean the surface of your device case. Center the iOadapt™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

Allow adhesive to set at least **24 hours** before attaching to iOcore. For best results, let set 72 hours before first use.

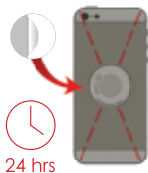

### 2. INSTALL

**Tools Needed:** 1/4" allen wrench

The Kustom Semisphere Mount bolts to the center riser. Support the handlebars, remove 4 bolts, line up the mount, and use the stock hardware to tighten.



### 3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.



## iOmounts™ SYSTEM COMPONENTS



### iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, GPS or other approved device.

**Note:** The iOadapt™ is NOT a magnet!



### iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the model-specific mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device.

## POWERSPORTS APPLICATION

- ➔ iOadapts™ supplied with the nomad™ and model-specific mounts —for powersports applications— are intended for phones, GPS, and other smaller devices only, and will not support full-size tablets or larger devices.
- ➔ While a very strong 3M VHB adhesive is used, the iOadapt will not stick to all surfaces and materials. This includes rubber, silicon, soft-touch and other soft and/or textured surfaces.  
For best results, Klock Werks recommends the use of a hard plastic type case.
- ➔ Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.

**Warning:** When riding or driving, please follow your state laws regarding device use.