




**HONDA** | FITS 1997-2000 GL1500 | 2001+ GL1800\* | 2015-2017 F6B  
\*LEFT SIDE MOUNT DOES NOT FIT 2018-2019 GOLD WINGS WITH DCT

## 1. ADAPT

Clean the surface of your device case. Center the iOadapt™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

Allow adhesive to set at least 24 hours before attaching to iOcore. For best results, let set 72 hours before first use.

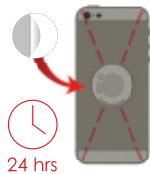

## 2. INSTALL MOUNT

**Tools Needed:** 5mm allen wrench

The Semisphere Mount bolts to the stock controls. Remove 2 bolts from the controls, line up the mount, and use the included hardware to tighten. Follow factory specs.



## 3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.



## iOmounts™ SYSTEM COMPONENTS



### iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, GPS or other approved device.

**Note:** The iOadapt™ is NOT a magnet!



### iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the model-specific mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device.

## POWERSPORTS APPLICATION

- iOadapts™ supplied with the nomad™ and model-specific mounts —for powersports applications— are intended for phones, GPS, and other smaller devices only, and will not support full-size tablets or larger devices.
- While a very strong 3M VHB adhesive is used, the iOadapt will not stick to all surfaces and materials. This includes rubber, silicon, soft-touch and other soft and/or textured surfaces.  
For best results, Klock Werks recommends the use of a hard plastic type case.
- Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.

**Warning:** When riding or driving, please follow your state laws regarding device use.