

OUTRIDER RAD GUARD FOR INDIAN SCOUT

INCLUDED IN BOX: Rad Guard • Silicone • Instructions



1. Remove the stock radiator cover.



2. Center Klock Werks' Rad Guard material on back side of radiator cover.




3. Fold bottom of Rad Guard approximately 90° to fit up to bottom of radiator cover. (Be careful, edges may be sharp. Use gloves.)



4. Fold top and sides of Rad Guard to contour of inner side of radiator cover.



5. Once you have achieved a close fit, remove Rad Guard and apply several spots of supplied adhesive around perimeter of radiator cover where Rad Guard material contacts.

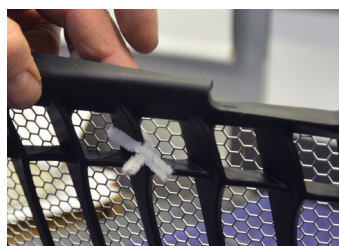

6. Place Rad Guard on back side of radiator cover, hold in place with zip ties, wire ties or similar until adhesive dries. Once dry, reinstall radiator cover on bike and enjoy!

QUESTIONS?



EMAIL:
info@getklocked.com



CALL:
(605) 996.3700