



WINDSHIELD TRIM FOR 2015+ HARLEY DAVIDSON ROAD GLIDE

INCLUDED COMPONENTS:


- Windshield Trim (1)
- Chrome Hardware (4)

TOOLS FOR INSTALLATION:

- + 1/8" allen wrench

QUESTIONS?

- ✉ EMAIL: info@getklocked.com
- ☎ CALL: (605) 996.3700

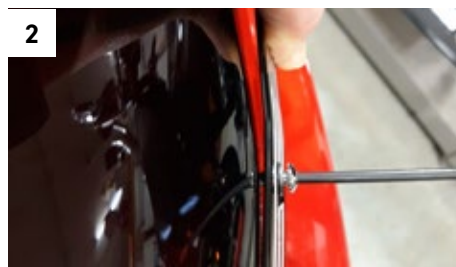

1. Remove the 4 screws that secure the windshield to the fairing taking care not to let the windshield slide off the gasket
2. Loosely install the center two screws through your new windshield trim, the windshield and into the fairing (FIG 1)
3. Using light pressure, press one end of the windshield trim toward the fairing to line up the holes before loosely installing a screw to hold it in place (FIG 2)
4. Install the last screw to hold the opposite end in place
5. While applying pressure to the center of the trim, secure all four screws (FIG 3 & 4)

CAUTION: Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.