




## SLINGSHOT | FITS ALL 2015+ MODELS W/STANDARD WINDSHIELD BRACKET

### 1. ADAPT

Clean the surface of your device case. Center the iOadapt™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

Allow adhesive to set at least 24 hours before attaching to iOcore. For best results, let set 72 hours before first use.

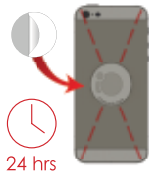

### 2. INSTALL MOUNT

**Tools Needed:** 4mm Allen Wrench

1. Install the provided flat head screw through the hemisphere backing plate and standoff. Make sure to align the dowel pin between the two pieces.
2. Fasten the assembly to the top threaded mount hole in the windshield mount post and torque to 90-120 in-lbs.
3. Fasten the hemisphere to the backing plate with the supplied button head both and torque to 90-120 in-lbs.



### 3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.




## iOmounts™ SYSTEM COMPONENTS



### iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, GPS or other approved device.

**Note:** The iOadapt™ is NOT a magnet!



### iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the model-specific mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device.

## POWERSPORTS APPLICATION

- ➔ iOadapts™ supplied with the nomad™ and model-specific mounts —for powersports applications— are intended for phones, GPS, and other smaller devices only, and will not support full-size tablets or larger devices.
- ➔ While a very strong 3M VHB adhesive is used, the iOadapt will not stick to all surfaces and materials. This includes rubber, silicon, soft-touch and other soft and/or textured surfaces.  
For best results, Klock Werks recommends the use of a hard plastic type case.
- ➔ Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.

**Warning:** When riding or driving, please follow your state laws regarding device use.